
Roll & Hill

T +1 718 387 6132
www.rollandhill.com


CONTENTS

28MAY2026

Cloud Pendant Body assembly

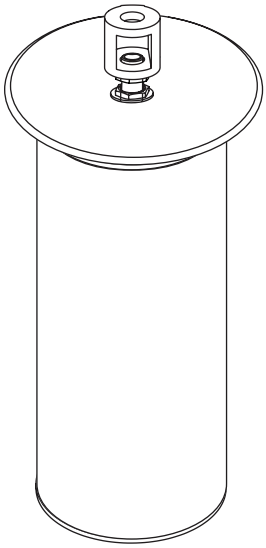

Glass (14" or 18")

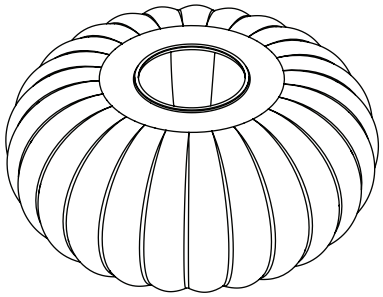

(x2) 8-32 J-box Screw




(x7) Wago Connector 2



42" wire




(1x) Bottom cap nut




(x1) 1/8IP nut




(x1) canopy with crossbar assembly

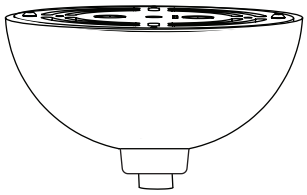

(x1) Bottom cover




(x1) Top cover




(x1) Lock-washer




(x2) Toggle anchor
On 240V fixtures only



(x2) Wood screw
On 240V fixtures only




(x2) Long 8-32 screw
On 240V fixtures only




(x2) Metal screw
On 240V fixtures only



(x1) Bottom plate

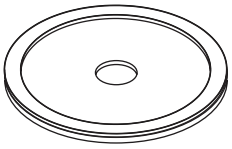

Threaded rod and cover tube



SAFETY INFORMATION

Suitable for dry, indoor use only.
The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

T +1 718 387 6132
www.rollandhill.com


Stem and cover tube length adjustment

Note: Please contact a licensed electrician.

Example fixture only:

To measure length of stem, first determine overall length (OAL), subtract 3" for the canopy with hang-straight height and subtract the fixture height from the OAL. Fixture height is measured from bottom of the fixture to stem connection point. The resulting measurement is the final stem length.

Ex. The fixture below has an OAL of 40" and a fixture height of 21.7".
40" OAL - 4.3" canopy - 21.7" fixture height = 14" stem

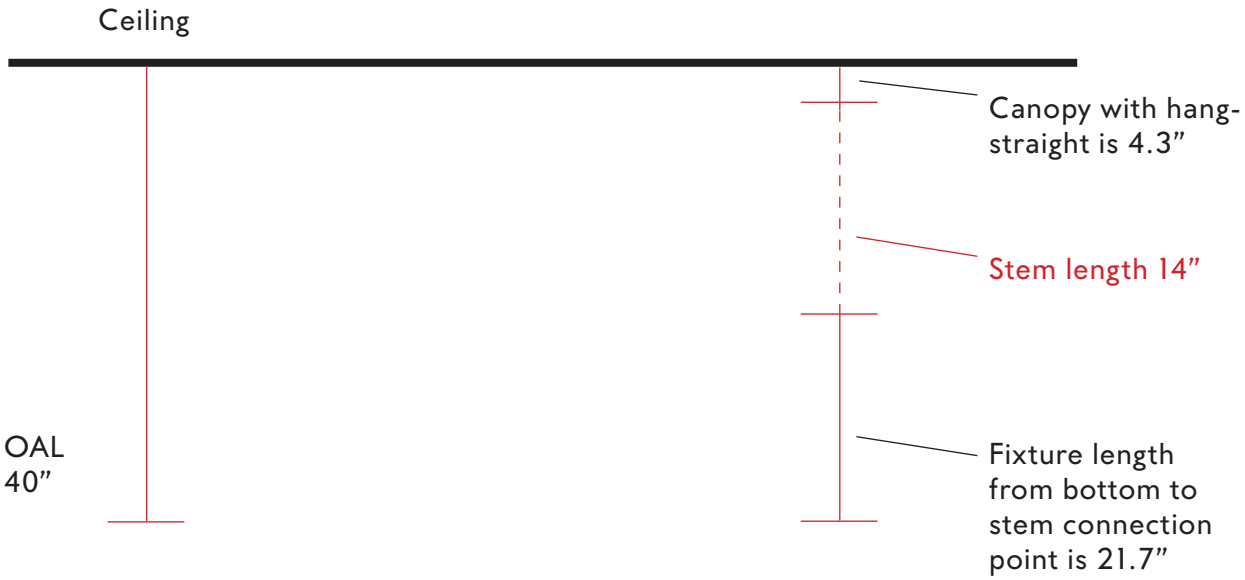


CLOUD PENDANT 14" and 18" | INSTALLATION 28MAY2026

Stem and cover tube length adjustment


Note: Please contact a licensed electrician.

Example fixture only:


1. To customize the length of the provided stem, cut cover tube to desired length. Then cut the inner threaded tube so that it remains 1/2" longer than the cover tube.

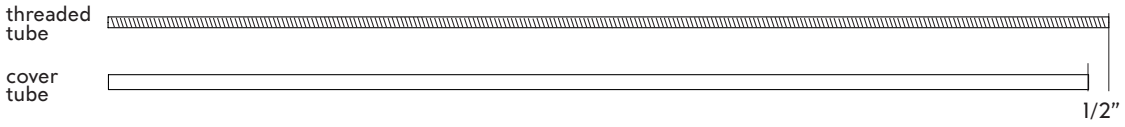


2. Mark the length of the tube required, using a marker or tape. Then hold down the tube with a hand or a clamp, use a hacksaw or electrical tool to cut the tube. Recommended to clean tube after cutting to remove any metal chippings.

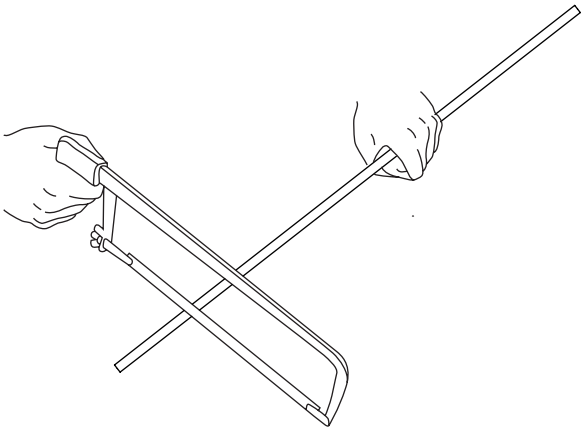

3. Now that the cover tube is cut to 1", measure the all thread tube to be 14 and 1/2" long. And place a mark, with a marker or tape.

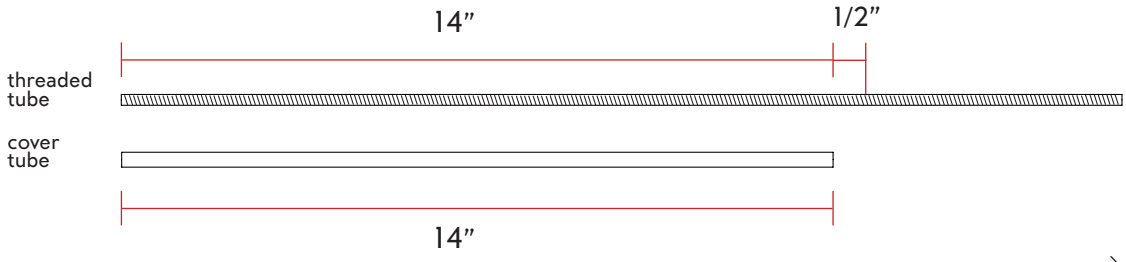

4. Hold down the all thread with a hand or a clamp, use a hacksaw or electrical tool to cut the all thread tube. Recommended to clean all thread tube after cutting to remove any metal chippings.

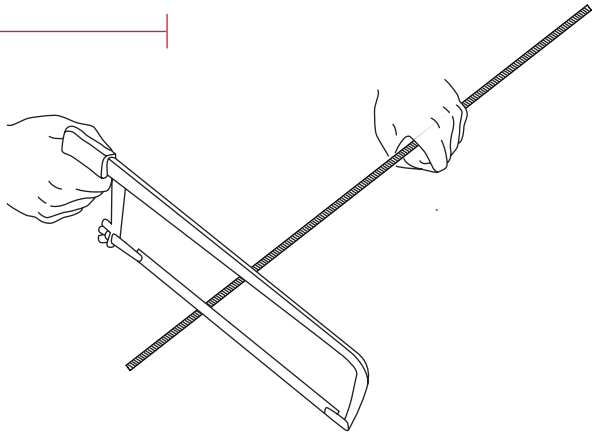


T +1 718 387 6132
www.rollandhill.com

CLOUD PENDANT 14” and 18” | INSTALLATION 28MAY2026

Note: Please contact a licensed electrician.

1. Unscrew the canopy nut (A), to release the crossbar assembly with LED driver (B) from the canopy (C).

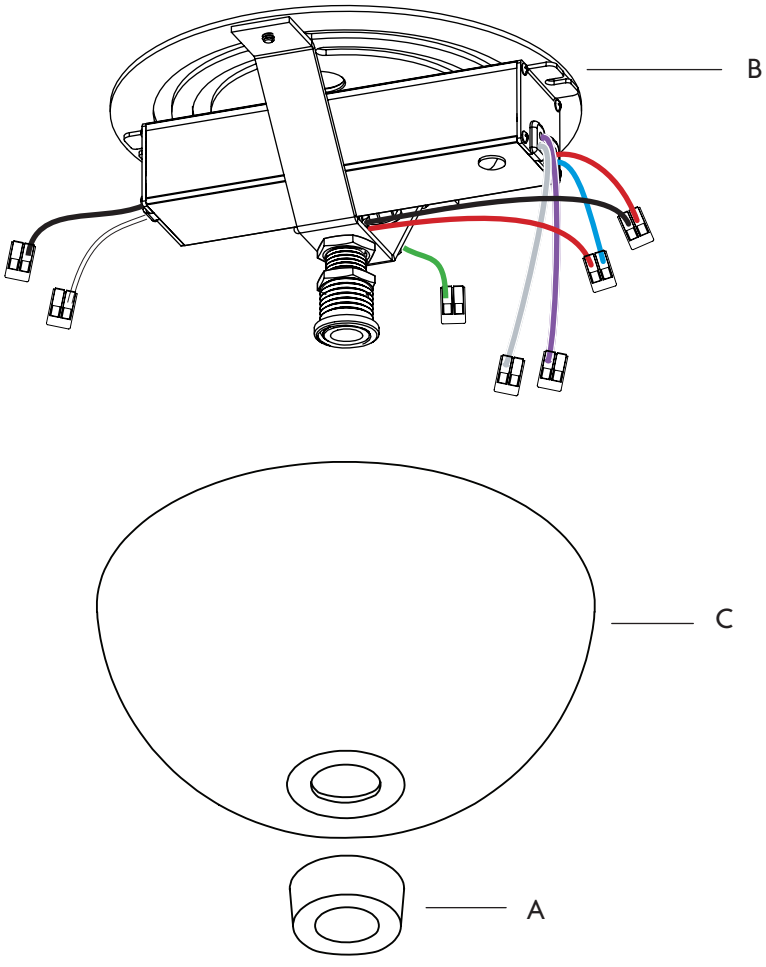


T +1 718 387 6132
www.rollandhill.com

CLOUD PENDANT 14 and 18 | STEM ASSEMBLY 28MAY2026

Note: Please contact a licensed electrician.

2. Screw on a nut (D) on to the threaded rod (E), then fit the lock-washer (F) and screw the threaded rod into the hickey (G).
3. Then slide the cover tube (H) over the threaded rod.
4. Pull the provided 42" wire set through the stem, and out of the hickey. See enlarged image below.


NOTE: When assembled, there should only be one to two threads visible inside the hickey. See enlarged image below.

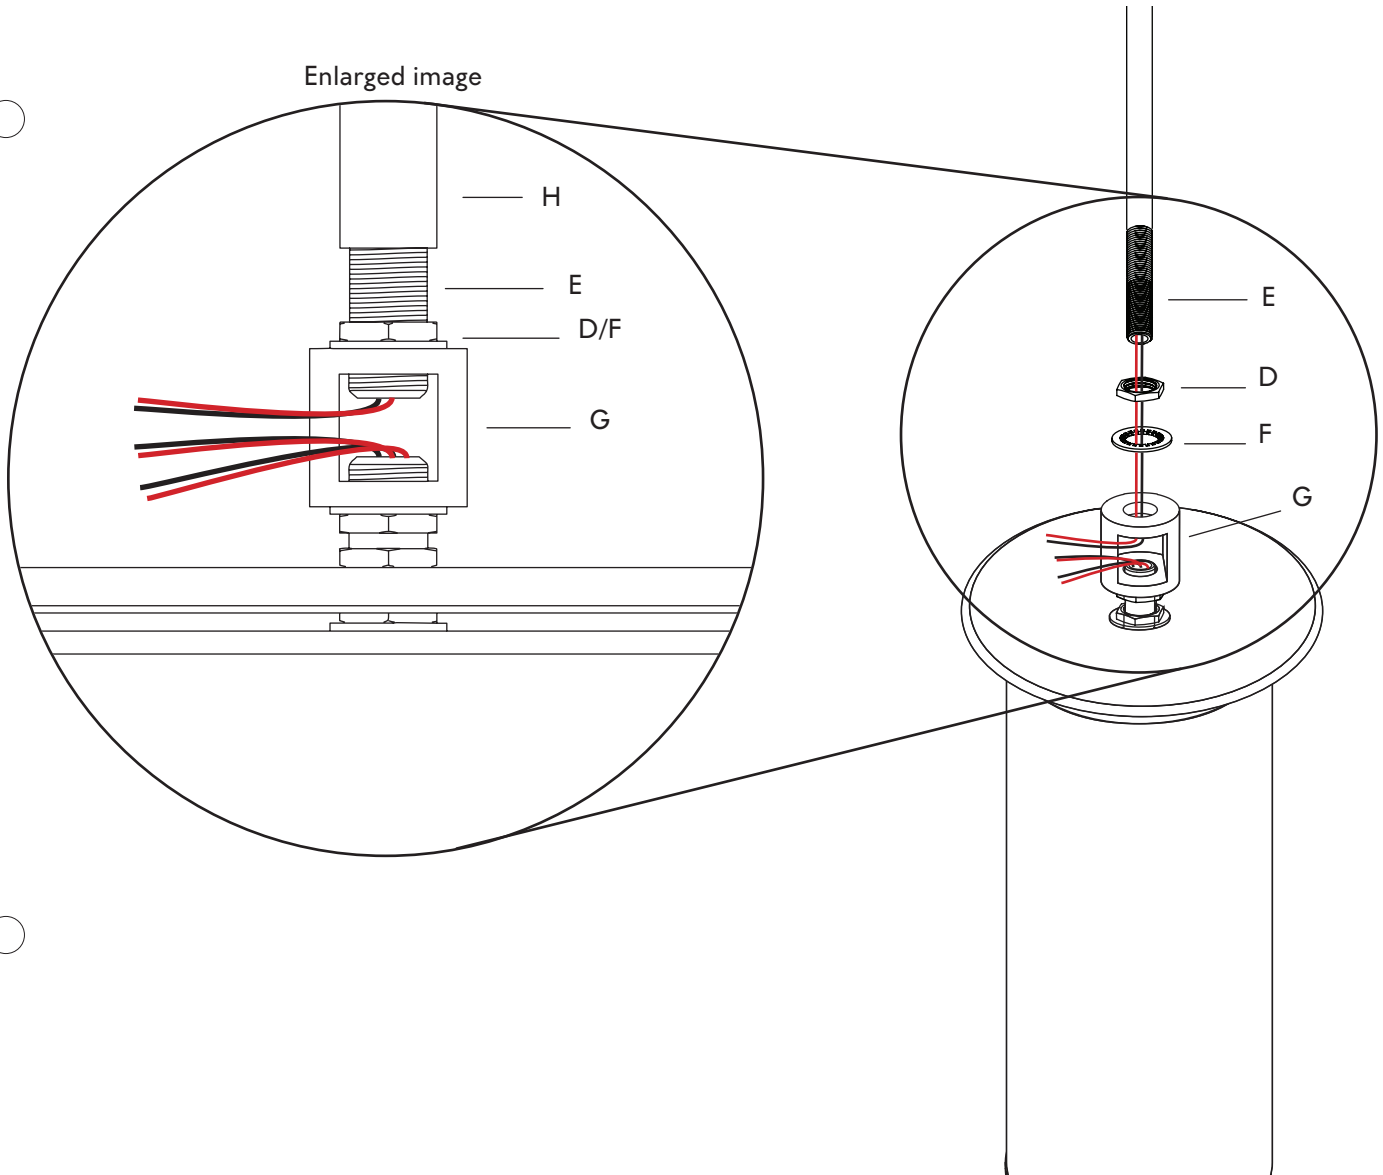

T +1 718 387 6132
www.rollandhill.com

Note: Please contact a licensed electrician.


5. Slide the following in order onto the threaded rod with cover tube (E/H): top cover (I), canopy nut (A), and canopy (C).
6. Pull the wires from the threaded rod, through the crossbar assembly (B). Then secure the crossbar assembly on to the threaded rod.

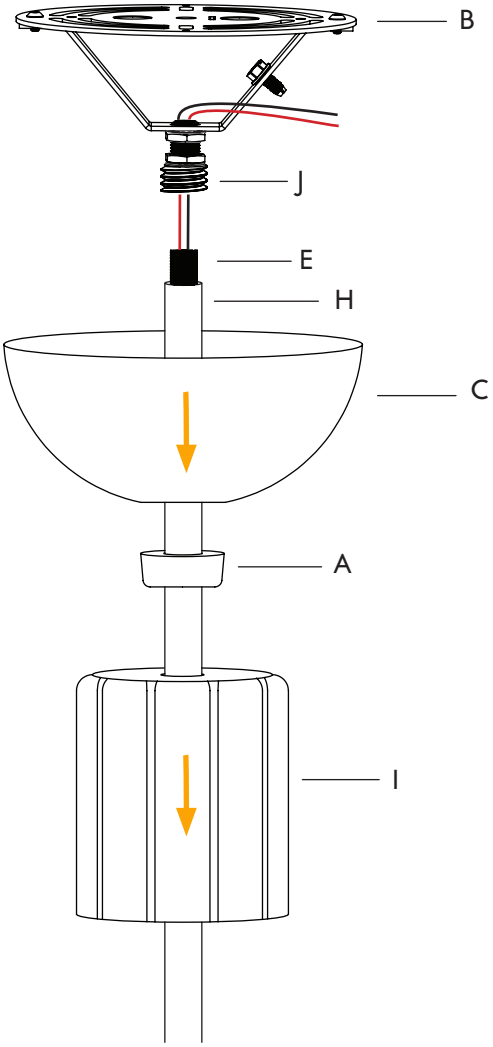

CLOUD PENDANT 14" and 18" | INSTALLATION 28MAY2026

Note: Please contact a licensed electrician.

7. Raise the crossbar assembly (B) to junction box (K), and secure with #8-32 screws (L). Be sure to pull out the wires from the junction box, through the hole in the cross bar.

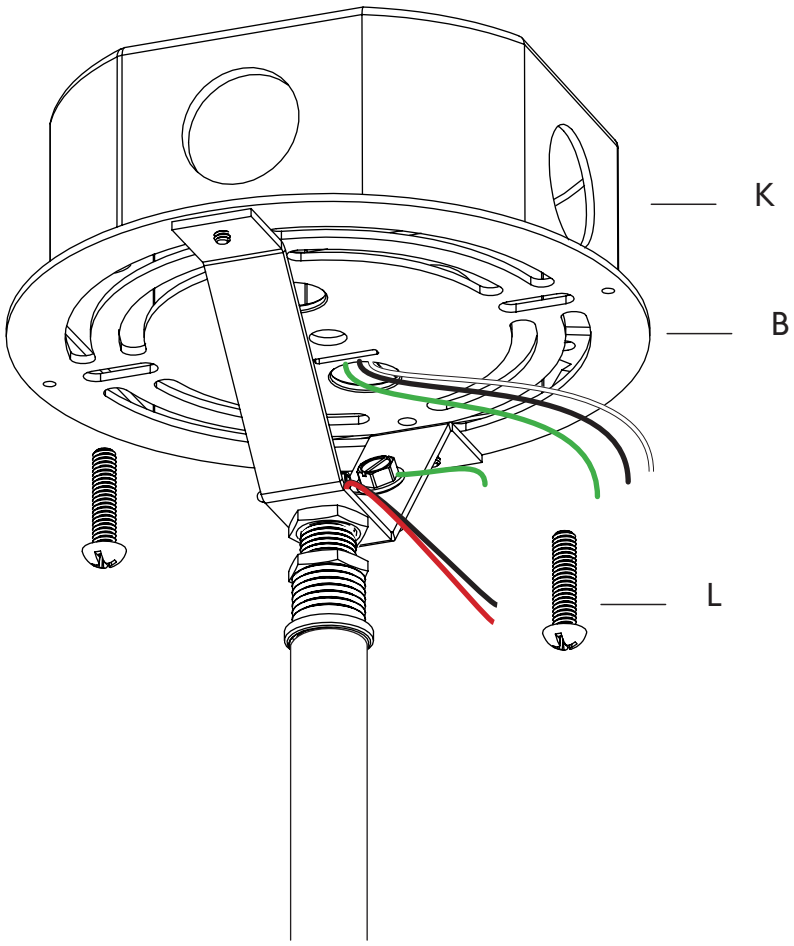

CLOUD PENDANT 14" and 18" | INSTALLATION 28MAY2026

Note: Please contact a licensed electrician.

8. Fit the driver (M) into the space in the crossbar assembly (B).


9. Make the electrical connections between the lead AC wires and the driver using the provided wago connectors (N).

10. Connect the secondary wires to the fixture using the provided wago connectors (O) (Optional: Connect the 0-10V dimming wires (P) as needed)

11. Connect the ground wire (Q) with the provided wago connector.

12. Tuck all wires into the crossbar assembly, and raise the canopy (C), make sure not to pinch any wires.

13. Secure the canopy (C) with canopy nut (A).

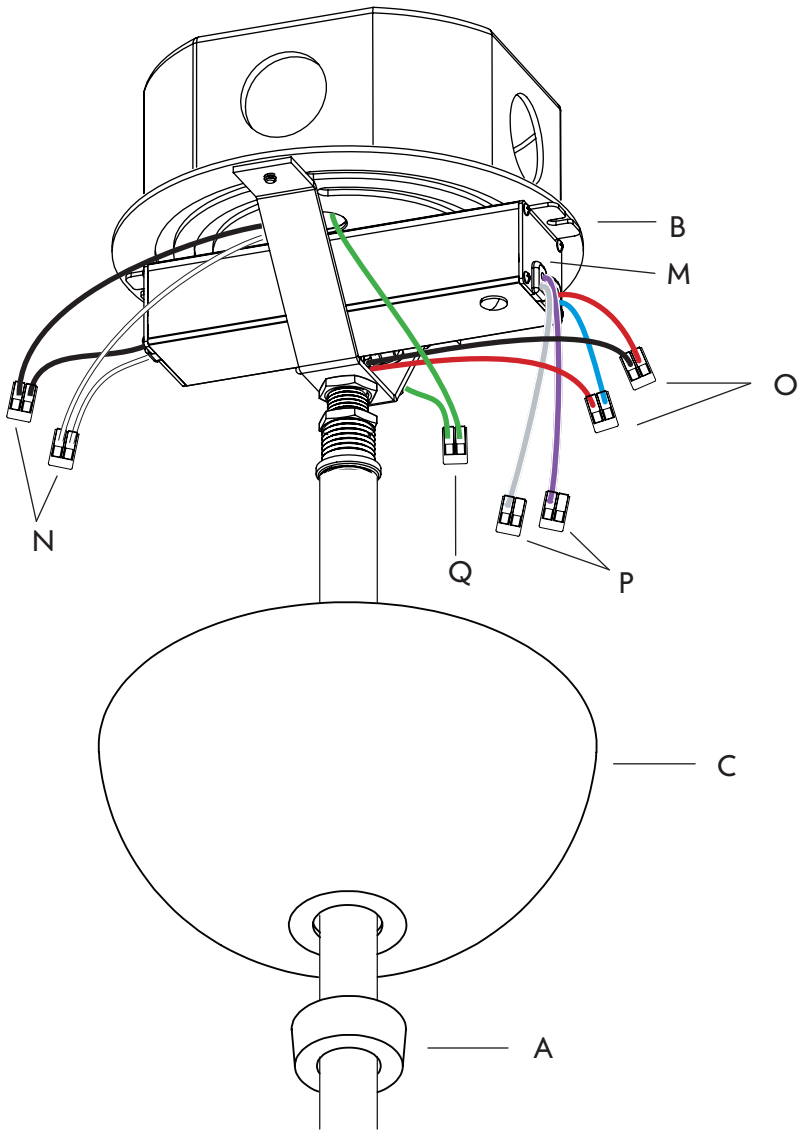

T +1 718 387 6132
www.rollandhill.com

CLOUD PENDANT 14" and 18" | INSTALLATION 28MAY2026

Note: Please contact a licensed electrician.

14. Next, fit the glass (R) (14" or 18") onto the Cloud body (S).
15. Then secure it with the bottom plate (T), bottom cap (U), and bottom cap nut (V).

Note: Do not over tighten the bottom cap nut.
Be sure to align the glass at the top of the body in order for it to hang straight.

